

User's Manual

GTC605

FUEL INJECTION ANALYZER

Table of contents


1. SAFETY RULES	Page 1
2. GTC605 KIT CONTENTS	Page 1
3. TECHNICAL SPECIFICATIONS	Page 2
3.1 General Specifications	Page 2
3.2 Measurement Specifications	Page 2
4. GENERAL DESCRIPTION	Page 3
4.1 Instrument Description	Page 3
4.2 Display Description	Page 3
5. BUTTONS, ICONS AND MENUS OPERATION	Page 4
5.1 POWER/CLEAR Button and Menu	Page 4
5.2 SYSTEM Button and Menu	Page 4
5.3 MODE Button and Menu	Page 5
5.4 VIEW Button and Menu	Page 6
5.5 HOLD Button Functions	Page 7
5.6 Tachometer Readings	Page 8
5.7 USB Connection Indicator	Page 8
5.8 Battery Level Indicator	Page 8
6. MEASUREMENT MODES	Page 8
6.1 Engine RPM	Page 8
6.2 Fuel Injector On Time	Page 8
6.3 Fuel Injector Open Time	Page 8
6.4 Fuel Injector Open Delay	Page 8
6.5 Fuel Injector Close Delay	Page 9
7. DISPLAY VIEWS	Page 9
7.1 Chart View	Page 9
7.2 Comparison View	Page 10
7.3 Digital View	Page 11
7.4 Parade View	Page 12
7.5 Waveform view	Page 13
7.6 System Information View and Language Selection	Page 13
8. MEASUREMENT PROCEDURES	Page 14
8.1 Sensor and Cable Setup	Page 14
8.2 Ground Wire	Page 14
8.3 Measuring Solenoid and Piezoelectric Fuel Injectors	Page 15
8.4 Measuring Mechanical Fuel Injectors	Page 16
9. FUEL INJECTION MEASUREMENT AND WAVEFORMS	Page 17
9.1 Solenoid Fuel Injectors	Page 17
9.2 Piezoelectric Fuel Injectors	Page 18
9.3 Mechanical Fuel Injectors	Page 19
10. RECHARGING THE INSTRUMENT	Page 20
11. MAINTENANCE	Page 21
12. WARRANTY	Page 21

1. SAFETY RULES


- This instrument is designed for indoor use at temperatures between 32° and 104°F (0°C and 40°C) and altitudes up to 6500 ft. (2,000 meters).
- To ensure that the instrument is used safely, follow all safety and operating instructions in this operation manual. If the instrument is not used as described in this user's manual, the safety features of this instrument may be impaired.
- Do not use the instrument if the instrument, the sensors, or the flexible probe look damaged, or if you suspect that the instrument is not operating properly.
- When using the instrument, keep away from moving parts (fan, drive belts, etc) and hot objects (exhaust pipes, muffler, catalytic converter, etc), to avoid personal injuries and damage to the instrument, the sensors, flexible probe and extension cable..
- Do not connect the instrument to anything other than the sensors, flexible probe, extension cable, USB cable, or AC power adapter provided.
- At all times, to avoid electrical shock, use CAUTION when working with electrical circuits above 60 VDC or 25 VAC rms. Such voltages pose a shock hazard.
- Do not operate this instrument while connected to the AC power adaptor or any other device.
- To avoid electrical shock or damage to the instrument, do not exceed the specified input limits.

Exceeding the limits listed above when using this apparatus, or not observing the precautions listed above can expose you to physical injury and permanently damage your instrument and/or parts and components of the vehicle under test.


2. GTC605 KIT CONTENTS

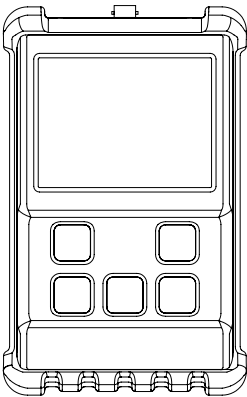

 
Instrument with
protective rubber
holster



Three-channel
sensor

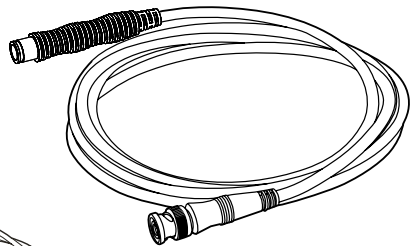


Sensor cable

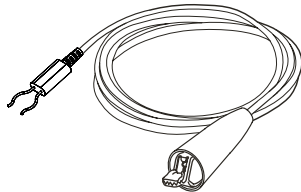

Grounding wire



USB Type-C to
Type-A adaptor

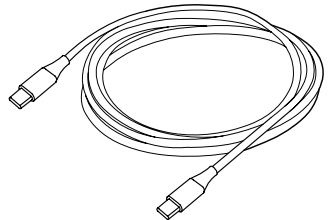

USB Type-C Cable

3. TECHNICAL SPECIFICATIONS

3.1 General Specifications

Display:	3.5" IPS LCD, 320 x 240 pixels resolution.
Update rate:	Up to 30 times per second.
Fuel injector type:	Solenoid, piezoelectric and mechanical.
Power (internal):	3.2 volt/1600 mAh, rechargeable LiFePO4 battery.
Auto power off:	Automatically powers off after 3 min. of inactivity.
Battery life:	Approximately 4.5 hours of continuous operation.
BNC Connector (in/out):	6 VDC, 10 mADC
USB connector (input):	USB Type-C (5 Volt / 1.0 amperes DC).
Cable length:	83.5" (212 cm) long coaxial cable with connectors.
Three-channel sensor:	0.57" (D) x 2.74" (L) / (14.4 x 69.7 mm)
Dimensions:	166 x 99.5 x 33.5 mm or 6.5"x 3.9" x 1.3" - without cable and sensor.
Weight:	Approximately 325 g or 14.5 oz without cable and sensor.
Included accessories:	Three-channel (voltage, current and vibration) sensor, 2.1m (82.6") long sensor cable, 1m (39.4") grounding wire, protective rubber holster, USB Type-C cable, USB Type-C to Type-A adapter, padded hard carrying case, and user's manual.

3.2 Measurement specifications

- The specifications below are typical at 23° C, and will vary slightly from device to device, and with temperature. Do not connect the instrument to anything other than the sensor, cable and USB cable provided.

4. GENERAL DESCRIPTION

Measurement Mode	Measurement Range	Resolution	Accuracy
Tachometer	400 to 9999 RPM 2-stroke and 4-stroke	1 RPM	0.5% ± 1 LSD
Injector on time	0 to 30 ms	0.01 ms	± 0.05 ms + 1 LSD
Injector open time	0 to 30 ms	0.01 ms	± 0.05 ms + 1 LSD
Injector open delay	0 to 30 ms	0.01 ms	± 0.05 ms + 1 LSD
Injector close delay	0 to 30 ms	0.01 ms	± 0.05 ms + 1 LSD

4.1 Instrument Description

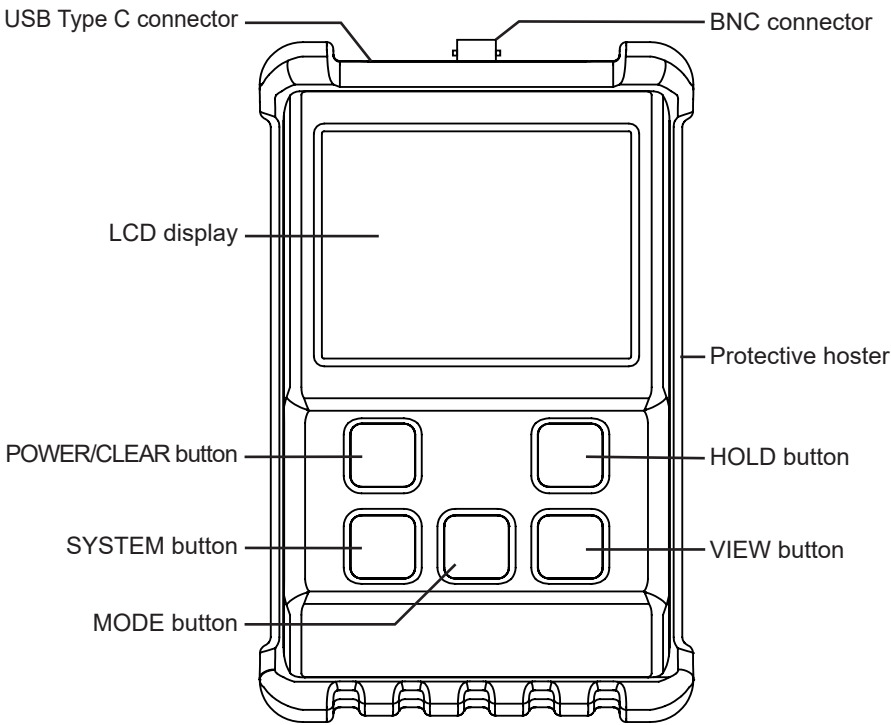


Fig. 1 - Instrument description

4.2 Display Description

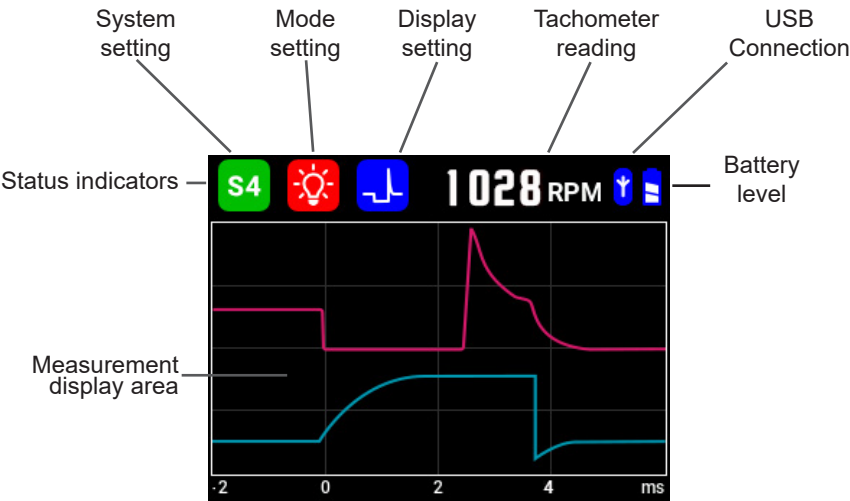


Fig. 2 - IPS LCD Display

5. BUTTONS, ICONS AND MENU OPERATION

5.1 POWER/CLEAR Button



- When the instrument is OFF, press and hold the POWER/CLEAR button to turn the unit ON (in approximately 1 second).
- When the instrument is ON, press and hold the POWER/CLEAR button to turn the unit OFF (in approximately 2 seconds).
- When the instrument is ON, press the POWER/CLEAR button to clear all measurement data, and start a new measurement. This operation can be also be performed to re-scale the measurements and optimize viewing in the display.
- The 'Auto-Power-Off' feature will automatically turn the instrument off after 3 minutes of no button being pressed or 15 seconds after the last signal was detected. Turning the unit off manually when not in use will prolong battery life.

5.2 SYSTEM Button and Menu



- The SYSTEM button is used to select the injector type and engine cycle corresponding to the engine under measurement. Upon pressing this button, a pull down menu will open with the current setting highlighted. To change the setting press the SYSTEM button repeatedly until the correct setting is highlighted, then wait until the pull down menu closes. The new setting will be indicated by the system icon at the top of the screen.

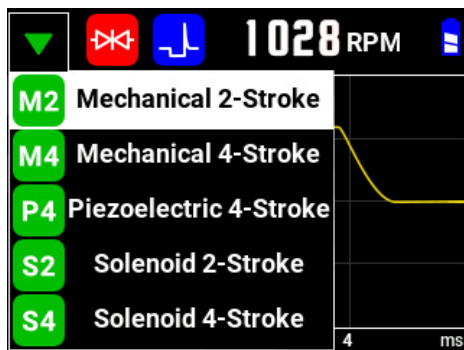


Fig. 3 - System selection menu

M2

Mechanical-type injector in a 2-stroke engine

M4

Mechanical-type injector in a 4-stroke engine

P4

Piezoelectric-type injector in a 4-stroke engine

S2

Solenoid-type injector in a 2-stroke engine

S4

Solenoid-type injector in a 4-stroke engine

5.3 MODE Button and Menu



- The MODE button is used to select the type of measurement to be shown on the display. Upon pressing this button a pull down menu will open with the current setting highlighted. To change the setting press the MODE button repeatedly until the desired setting is highlighted, then wait until the pull down menu closes. The new setting will be indicated by the mode icon at the top of the screen.

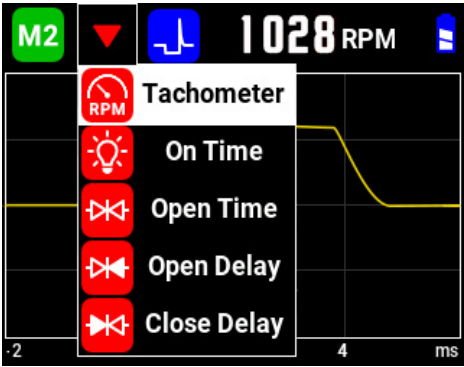


Fig. 4 - Measurement mode selection menu



Measuring/displaying engine RPM (tachometer).



Measuring/displaying fuel injector control voltage and current (for solenoid and piezoelectric systems).



Measuring/displaying fuel injector open time.



Measuring/displaying fuel injector open delay (for solenoid and piezoelectric systems).



Measuring/displaying fuel injector close delay (for solenoid and piezoelectric systems).

5.4 VIEW Button and Menu



- The VIEW button is used to select how the chosen measurement will be shown on the display. Upon pressing this button a pull down menu will open with the current setting highlighted. To change the setting press the VIEW button repeatedly until the desired setting is highlighted, then wait until the pull down menu closes. The new setting will be indicated by the view icon at the top of the screen.
- To access the system information view and language selection screen press and hold the VIEW button, to exit press the VIEW button again and select any view.

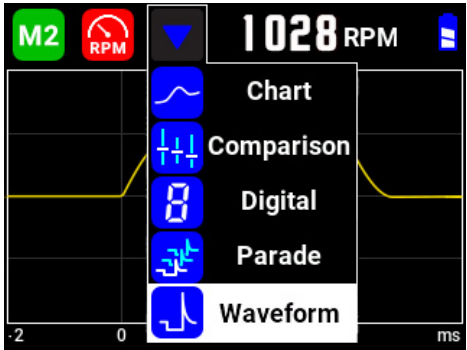


Fig. 5 - Display mode selection menu



Chart (i.e. trendline) view.



Comparison view.



Analog gauge and digital readouts.



Parade View.



Waveform (oscilloscope-style) view.



System information view and language selection.

5.5 HOLD Button Functions

HOLD

- When chart, digital or waveform display mode is selected, pressing the HOLD button will pause the measurement, hold the current display, and the word HOLD will be shown in the measurement area of the display to indicate this status. Press the HOLD button again to resume normal operation.
- When in the comparison display mode, this button is used to initiate and stop a measurement. For details see '7.2 Comparison view'.
- When in the system information display mode, pressing this button allows the selection of the language used in the menus. For details see '7.6 System information view and language selection'.
- In addition to the above functionality, each time the HOLD button is pressed, and depending on the VIEW mode selected, the following is saved to the GTC605's internal memory:

VIEW mode	Files saved
Chart	ERJ and CSV data files and JPEG screenshot.
Comparison	ERJ and CSV data files and JPEG screenshot.
Digital	ERJ data file and JPEG screenshot.
Parade	ERJ and CSV data files and JPEG screenshot.
Waveform	ERJ and CSV data files and JPEG screenshot.

- To retrieve these files, use the supplied USB Type C cable to connect the GTC605 to a computer.
- The GTC605 will be recognized by the computer as a USB drive named "GTC605_####" (where the #### is your unit's unique identifier) and is where the files will be stored.
- File naming convention:

VIEW mode	Filename
All	GTC605_screenshot_####.jpg
All	GTC605_compressed_data_####.erj
Comparison	GTC605_comparison_####.csv
Chart	GTC605_trends_####.csv
Parade	GTC605_waveforms_####.csv
Waveform	GTC605_waveform_####.csv

The "####" in the files names represent sequential file numbers which are the same for each set of screenshots and data files.

5.6 Tachometer Reading

12345 Digital readout of the engine RPM.

 
5.7 USB Connection Indicator



Displays if USB host is detected

5.8 Battery Level Indicator

The battery level indicator provides the state of charge of the internal battery, as follows:



NOTE: The instrument will automatically turn off when the battery voltage is very low.

6. MEASURING MODES

There are four different fuel injection parameters that can be selected for measurement, depending on the engine's fuel injection system:

- Engine RPM.
- Fuel injector control voltage (for solenoid and piezoelectric systems).
- Fuel injector open time.
- Fuel injector open delay (for solenoid and piezoelectric systems).
- Fuel injector close delay (for solenoid and piezoelectric systems).

6.1 Engine RPM

Measures engine RPM (revolutions per minute) in 2-stroke and 4-stroke engines, and may be used in combination with other measurements to evaluate fuel injection system performance at different engine speeds.

6.2 Fuel Injector On Time (for solenoid and piezoelectric systems)

This signal is generated by the engine's Powertrain Control Module/Electronic Control Module (PCM/ECM) to control the opening and closing of the fuel injector through the movement of the pintle or needle (i.e. injection of fuel in the intake manifold or cylinder). The control voltage is usually in the form of a pulse or several pulses and absence of this control voltage could indicate a problems with the PCM/ECM, connections or wiring. For solenoid type fuel injectors, the shape of the control pulse(s) may include spikes in the voltage (CEMF or kickback) generated by the inductance of the solenoid coil.

6.3 Fuel Injector Open Time

This is the length of time the fuel injector is open. It is measured from the from when the pintle moves to its open position to when the pintle or needle moves back to its closed position. Unusually long or short open time may be caused by a defective or fouled fuel injector.

6.4 Fuel Injector Open Delay (for solenoid and piezoelectric systems)

This is the length of time from when the control voltage is applied to when the pintle or needle moves to its open position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short open delays may indicate an electrical problem in the fuel injector circuits or mechanical condition.

6.5 Fuel Injector Close Delay (for solenoid and piezoelectric systems)

This is the length of time from when the control voltage is removed to when the pintle or needle moves to its closed position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short close delays may indicate an electrical problem in the fuel injector circuits or mechanical condition.

7. DISPLAY VIEWS

There are four views that can be selected to display measurements:

- Chart
- Comparison
- Digital
- Waveform
- Parade
- System information view and language selection.

7.1 Chart View

This view displays the selected measurement's value for each of the last 276 injections, with the left-most measurement being the oldest, and the right most the newest. In case the mode selected has measures two parameters, this chart will only show the one deemed to be the most reliable. If applicable, the measurement scale and units are located on the vertical axis, at the far left of the display.

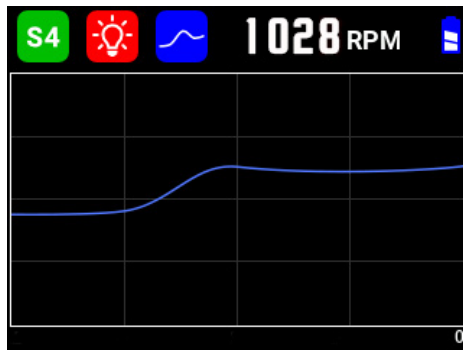


Fig 6 - Chart view

- **POWER/CLEAR button:**

Pressing the Power/Clear button clears all values from the chart, and re-scales the chart if necessary.

- **MODE button:**

Pressing the MODE button once will open the mode menu, and highlight the measurement mode currently selected; pressing the MODE button again while the menu is open will select the next available measurement mode. All available measurements (RPM, on time, open time, open delay and close delay) for the type of fuel injector selected are simultaneously tracked and stored, and are available for viewing at any time (without delay).

- **HOLD button:**

Pressing this button will pause the measurement, and hold the display in its the current condition. Pressing the HOLD button again will resume normal measurement.

7.2 Comparison View

This mode is for comparing sets of values (minimum, average and maximum measurements) between several cylinders, under various testing conditions, or other situations.

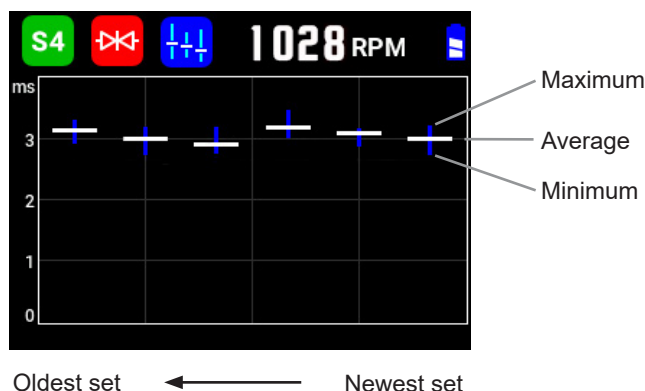


Fig. 7 - Comparison mode

The measurement sets are displayed from left to right, with the left-most set of values being the oldest, and the right-most the newest. A new set of values is added every time the HOLD button is pressed twice (stop/start) and up to 16 sets of values will be shown in the graph at once, if this maximum is exceeded, the oldest set will be deleted and a new set added.

- **POWER/CLEAR Button:**

Pressing the POWER/CLEAR button clears all measurements, and re-scales the display.

- **MODE Button:**

Pressing the MODE button once will open the mode menu, and highlight the measurement mode currently selected; pressing the MODE button again while the menu is open will select the next available measurement mode. All available measurements (RPM, on time, open time, open delay and close delay) for the type of fuel injector selected are simultaneously tracked and stored, and are available for viewing at any time.

- **HOLD Button:**

The HOLD button when pressed once pauses measurement and holds the display in its current condition (while displaying a HOLD label in the screen). Pressing the HOLD button a second time will remove the pause (and label), and add a new set of values at the right of the screen, which will keep updating until the HOLD button is pressed again. This is repeated every time the button is pressed twice (stop/start) and up to the last 16 set of values will be shown in the display at once, if this maximum is exceeded the oldest set will be deleted and a new set added.

- **Step by Step Procedure**

1. Turn the instrument on and using the SYSTEM button and pull down menu select the appropriate type of fuel injector and engine cycle .
2. Using the MODE button and pull down menu select the desired mode (measurement type).
3. Using the VIEW mode and pull down menu select Comparison.
4. Press the HOLD button once. The display will show HOLD.
5. While in hold mode, press the POWER/CLEAR button once.
6. Place and hold the sensor on the first fuel injector to be compared, and press the HOLD button once.

7. The instrument will start measuring and displaying maximum, minimum and average measurements. When sufficient data has been collected, press the HOLD button once again. This will finish the measurement set for the injector and the display will show HOLD.
8. Place and hold the sensor on the next fuel injector to be compared and press the 'HOLD' button to start a new set of measurement and repeat this procedure for each new injector to be compared.

7.3 Digital View

- **On time, open time, open delay, or close delay mode selected:** Displays the selected measurement in analog and maximum and minimum in digital format, along engine RPM.



Fig. 8 - Digital view

- **POWER/CLEAR Button:**

Pressing the POWER/CLEAR button clears all digital readout values, indicators, and re-scales the analog gauge if necessary.

- **MODE Button:**

Pressing the 'MODE' button once will open the mode menu, and highlight the measurement mode currently selected; pressing the 'MODE' button again while the menu is open will select the next available measurement mode. All available measurements (RPM, on time, open time, open delay and close delay) for the type of fuel injector selected are simultaneously tracked and stored, and are available for viewing at any time (without delay).

- **HOLD Button:**

Pressing this button will pause measurement, and hold the display in the current condition. Pressing the 'HOLD' button again will resume normal measurement.

7.4 Parade View

This view allows the comparison of up to four waveforms between several cylinders. The waveforms are displayed from top to bottom, with the top most waveform being the oldest, and the bottom most the newest. A new waveform is added every time the HOLD button is pressed twice (start/stop) and up to the last four waveforms will be shown in the display at once, if this maximum is exceeded, the oldest waveform will be deleted and a new waveform added.

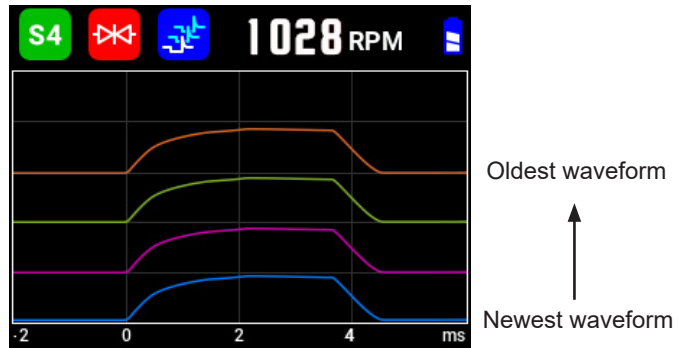


Fig. 9 - Parade view in on time mode

- **POWER/CLEAR Button:**

Pressing the POWER/CLEAR button clears all measurements, and re-scales the chart if necessary.

- **MODE Button:**

Pressing the MODE button once will open the mode menu, and highlight the measurement mode currently selected; pressing the MODE button again while the menu is open will select the next available measurement mode. All measurement modes are simultaneously tracked and stored, and available for viewing at any time (without delay).

- **HOLD Button:**

The HOLD button when pressed once pauses measurement and holds the display in its current condition (while displaying a HOLD label in the center of the screen). Pressing the HOLD button a second time will remove the pause (and label), and add a new waveform to the screen, which will keep updating until the HOLD button is pressed again. This cycle repeats every time the button is pressed twice (start/stop) and up to the last four (4) waveforms will be shown in the screen at once, if this maximum is exceeded, the oldest waveform will be deleted and a new waveform added.

7.5 Waveform View

This view mode displays the signals amplitude over time (oscilloscope-style), which are color coded. The scale and units of the measurement are located on the vertical axis, at the far left of the display. The time scale and units are shown below the horizontal axis, at the bottom of the screen.

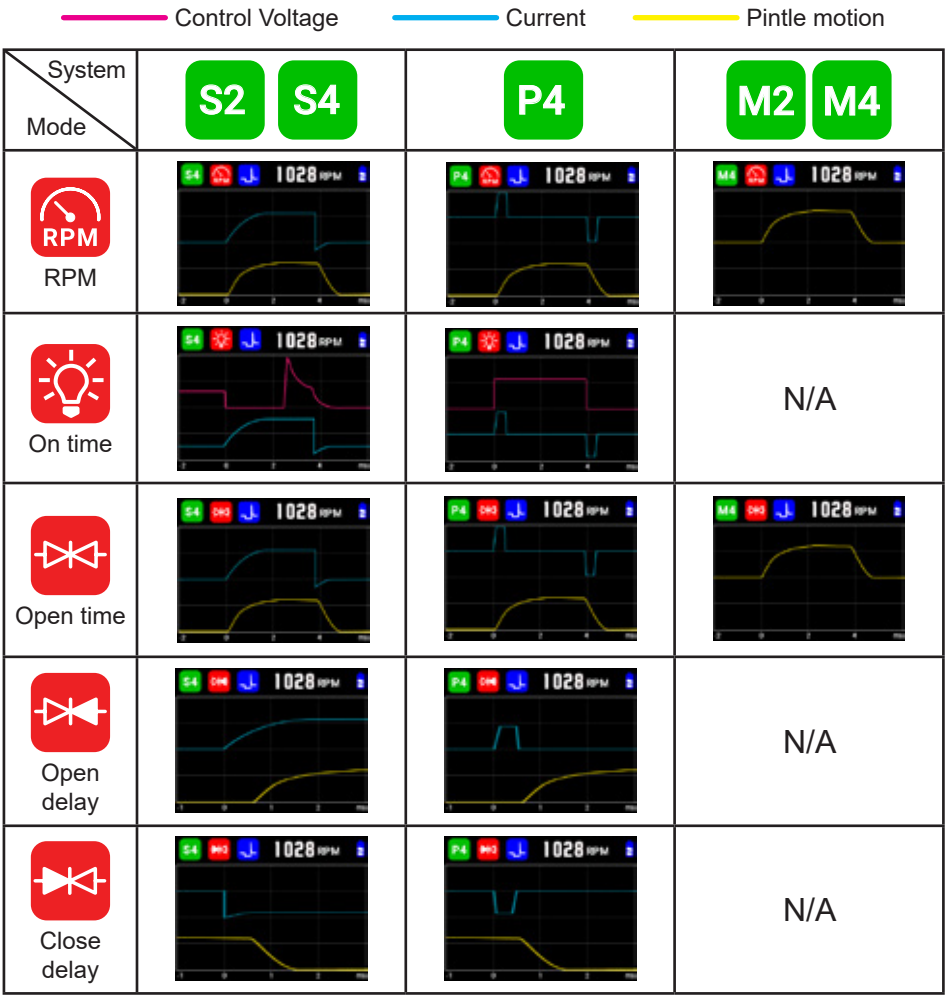


Fig. 10 - Waveform view

- POWER/CLEAR button:**
Pressing the POWER/CLEAR button clears the graph, and re-scales it if necessary.
- MODE button:**
Pressing the MODE button once will open the mode menu and highlight the measurement mode currently selected; pressing the MODE button again while the menu is open will select the next available measurement mode. The waveform graph focuses on the area which is most relevant to the mode selected.
- HOLD button:**
Pressing this button will pause the current measurement, and hold the display in the current condition. Pressing the HOLD button again will resume normal measurement.

7.6 System Information View and Language Selection

This view is not accessible from the view drop-down menu, but by pressing and holding the VIEW button for a couple of seconds and allows to change the menus' language.

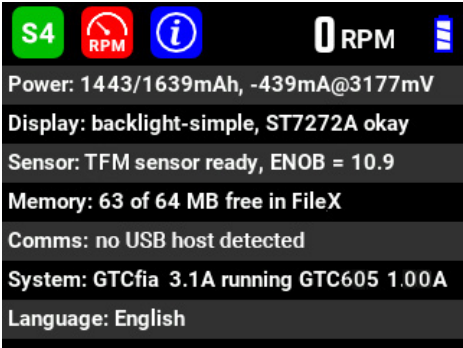


Fig. 11 - System information view and language selection

Power:	State of charge/capacity, current in/out @ battery voltage
Display:	Backlight control, display driver
Sensor:	Type of sensor detected, ADC resolution
Memory:	Available of total internal memory and file system
Comms:	Type of communication interface connected or in use
System:	Hardware version running firmware version
Language:	Selected user interface language

- **HOLD button:**
To change the menus' language press the HOLD button repeatedly until the desired language is shown.

8. MEASUREMENT PROCEDURES

CAUTION

To avoid personal injuries and damage to the instrument carefully inspect the area around the fuel injectors for damage or leaks, and avoid using the instrument in case any damage or leaks are found. Wear insulating gloves when working around high voltage and hot parts, and keep away from moving parts (fan, drive belts, etc.) and hot objects (exhaust manifold and pipes, muffler, catalytic converter, etc.).

8.1 Sensor and Cable Setup

This instrument is supplied with a three-channel (TFM) sensor and a cable.

- Three-channel sensor: it can detect the fuel injector control voltage, power (current) and motion of the pintle and is equipped with a jack barrel connector.
- Cable: 83.5" (212 cm) long coaxial cable equipped with a BNC connector at one end and a barrel connector receptacle and O-ring seal at the other.

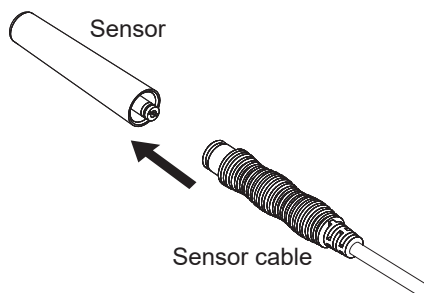


Fig.12 - Sensor connection to cable

- 1- Connect the sensor cable to the instrument using their BNC connectors.
- 2- Insert the sensor by twisting it into the barrel connector of the cable, and then press both firmly together.
- 3- When turned on the instrument will automatically detect the sensor connected to the sensor cable.

8.2 Ground Wire

The GTC605 is also supplied with a ground wire and clip, that allows to ground the instrument to the engine in order to reduce AC mains hum and other electrical interference.

- To connect the ground wire to the instrument, insert the ground wire's fork connector onto the barrel of the instrument's BNC connector as shown in the figures below.

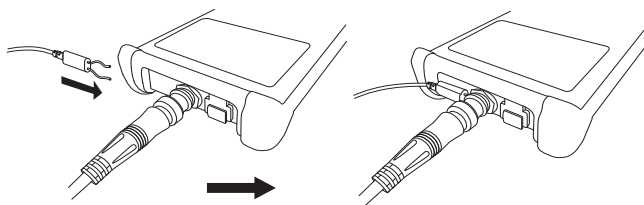


Fig 13 - Connecting the ground clip to the instrument

8.3 Measuring Solenoid and Piezoelectric Fuel Injectors

- 1- Ensure the instrument is turned off.
- 2- Ensure the sensor's barrel connector is plugged into the cable's receptacle, and that the cable is connected to the instrument.
- 3- Turn the instrument on and use the SYSTEM button to select the type of fuel injector (solenoid or piezoelectric) and the engine cycle (2-stroke or 4-stroke) corresponding to the engine under measurement.
- 4- Select the desired mode and view.
- 5- Place and press the sensor onto the fuel injector, and observe whether the instrument is able to detect and display the desired measurement.

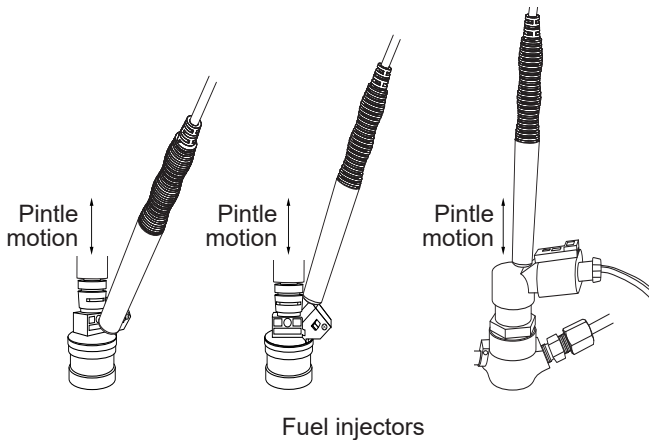


Fig. 14 - Using the sensor on solenoid and piezoelectric fuel injectors

- 6- If the instrument is unable to detect the signals of the fuel injector system signal, it may be necessary to reposition the sensor so that a consistent signal is detected and displayed.
- 7- External electrical noise (e.g. power mains hum) may interfere with the sensor causing distortion of the control voltage. To mitigate interference, use the ground wire and clip provided with the unit to connect the instrument to the electrical ground of the engine.

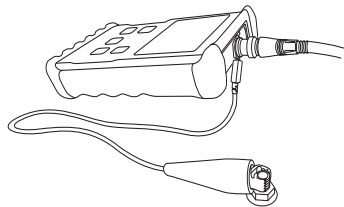


Fig. 15 - Grounding the instrument

NOTES

- To best detect the fuel injector's pintle or needle movement, place the sensor on a metal part of the injector body, aligning the sensor's body as much as possible with the fuel injector body (direction of movement of the pintle or needle). Apply a light pressure to the sensor, as applying excessive force may damage the sensor.

- The position of the sensor and the particular position and design of the fuel injector may affect the signal's detection and shape shown when the waveform display is selected. In order to compare waveforms between several cylinders' fuel injectors, the placement of the sensor relative to the fuel injector should be kept as consistent as possible for all measurements.
- In some engines, the ignition modules, spark plug wires, and fuel injectors are located very close together, and in rare occasions this may cause the instrument's sensor to detect ignition signals, leading to inconsistent measurements. This can usually be solved by changing the placement or orientation of the sensor on the fuel injector.

8.4 Measuring mechanical fuel injectors

- 1- Ensure the instrument is turned off.
- 2- Ensure the sensor's barrel connector is plugged into the cable's receptacle, and that the cable is connected to the instrument.
- 3- Turn the instrument on and use the SYSTEM button to select M4 or M2 corresponding to the engine cycle (2-stroke or 4-stroke) under measurement.
- 4- Select the desired mode and view.
- 5- Place and press the sensor onto the fuel injector, and observe whether the instrument is able to detect and display the desired measurement.

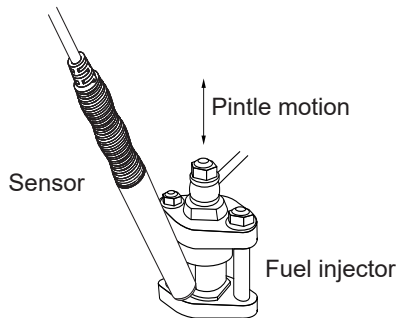


Fig. 16 - Using the sensor on a mechanical type fuel injector

- 6- If the instrument is unable to detect the signals of the fuel injector system signal, it may be necessary to reposition the sensor so that a consistent signal is detected and displayed.

NOTES

- To best detect the fuel injector's pintle or needle movement, place the sensor on the injector body, aligning the sensor's body as much as possible with the fuel injection body (direction of movement of the pintle or needle). Apply a light pressure to the sensor, as applying excessive force may damage the sensor.
- The position of the sensor and the particular position and design of the fuel injector may affect the signal's detection and shape shown when the waveform display is selected. In order to compare waveforms between several cylinders' fuel injectors, the placement of the sensor relative to the fuel injector should be kept as consistent as possible for all the measurements.

9. FUEL INJECTION MEASUREMENTS AND WAVEFORMS

9.1 Solenoid Fuel Injectors

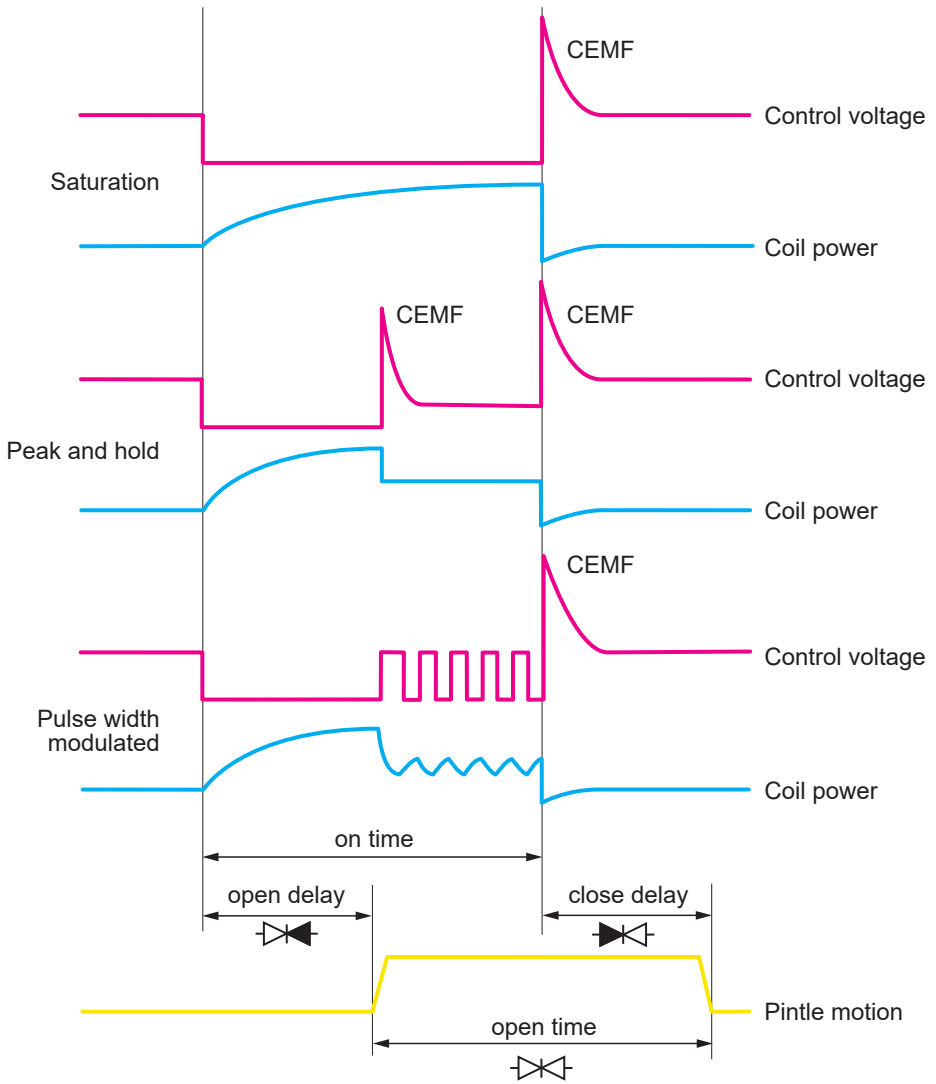


Fig. 17 - Typical solenoid fuel injector waveforms

- **Control Voltage (from PCM/ECM):** This is the control voltage applied by the Powertrain Control Module (PCM) or Electronic Control Module (ECM) to the fuel injector. This control voltage can be a constant voltage pulse (saturation), a peak and hold pulse, or pulse width modulated.
- **CEMF:** Counter Electromotive Force (or kickback) is generated by the inductance (coil) of the solenoid when the current through it is interrupted, causing a sudden collapse of the magnetic field. A small counter current is also generated by the solenoid by the CEMF.

- **On Time:** This is the length of time the PCM/ECM applies voltage (and current) to the fuel injector. The control voltage is usually in the form of a pulse where the current gradually increases (ramp) until it reaches saturation. When peak and hold or pulse width modulation control voltage are used, after saturation the current is reduced to a lower level, to reduce power consumption while holding the fuel injector open.
- **Open Time:** This is the length of time from when the pintle moves to its open position to when the pintle or needle moves back to its closed position. When the pintle reaches its open or close position, the pintle will take some time to settle (settling time). Settling time is a function of the fuel injector design, but is also affected by mechanical conditions, fuel flow, etc.
- **Open Delay:** This is the length of time from when the control voltage is applied to when the pintle or needle moves to its open position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short open delays may indicate an electrical problem in the fuel injector circuits or mechanical condition of the injector.
- **Close Delay:** This is the length of time from when the control voltage is removed to when the pintle or needle moves to its closed position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short close delays may indicate an electrical problem in the fuel injector circuits or mechanical condition of the injector.

9.2 Piezoelectric Fuel Injectors

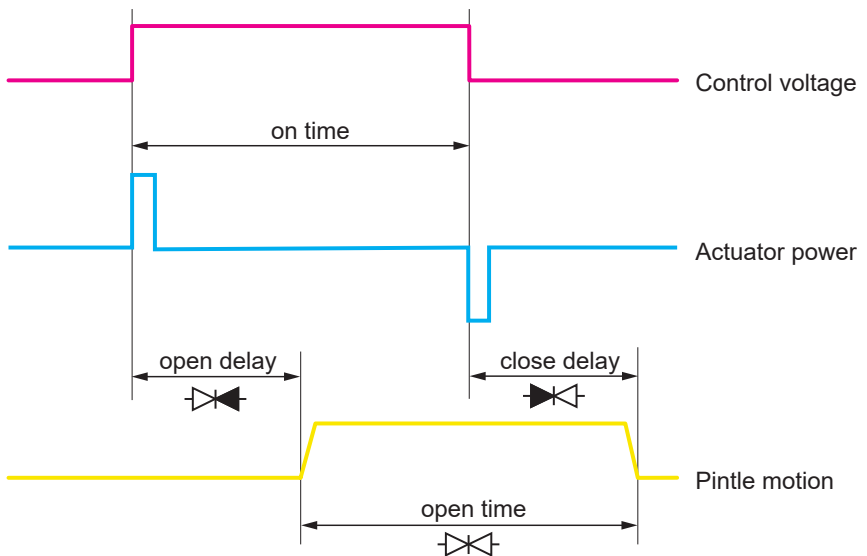


Fig. 18 - Typical piezoelectric waveforms

- **Control Voltage (from PCM/ECM):** This is the control voltage applied by the Powertrain Control Module (PCM) or Electronic Control Module (ECM) to the fuel injector.
- **On Time:** This is the length of time the PCM/ECM applies a voltage pulse to the fuel injector.

- **Open Time:** This is the length of time from when the pintle moves to its open position to when the pintle or needle moves back to its closed position. When the pintle reaches its open or close position, the pintle will take some time to settle (settling time). Settling time is a function of the fuel injector design, but is also affected by mechanical conditions, fuel flow, etc.
- **Open Delay:** This is the length of time from when the control voltage is applied to when the pintle or needle moves to its open position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short open delays may indicate an electrical problem in the fuel injector circuits or mechanical condition of the injector.
- **Close Delay:** This is the length of time from when the control voltage is removed to when the pintle or needle moves to its closed position. This delay is caused by the fuel injector electrical impedance (inductance/capacitance) and inertia of the moving parts. Unusually long or short close delays may indicate an electrical problem in the fuel injector circuits or mechanical condition of the injector.

9.3 Mechanical fuel injectors

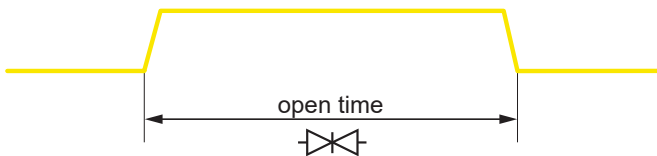


Fig. 19 - Typical mechanical injector waveform

- **Open Time:** This is the length of time from when the pintle moves to its open position to when the pintle or needle moves back to its closed position. When the pintle reaches its open or close position, the pintle will take some time to settle (settling time). Settling time is a function of the fuel injector design, but is also affected by mechanical conditions, fuel flow, etc.

10. RECHARGING THE INSTRUMENT

- 1-If still operating, turn the instrument power off.
- 2-Locate and lift the rubber cap (attached to the protective holster and located beside the BNC connector) to reveal the USB Type-C receptacle.
- 3-Insert the USB charger cable's USB Type-C plug into the receptacle of the instrument connector.

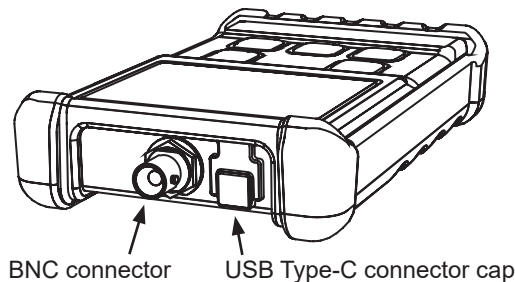


Fig. 20 - Instrument's connectors

- 4- Insert other end of the USB cable into the USB port of a USB power charger adapter, using the USB Type-C to USB Type-A adapter if necessary.
- 5- When the battery starts charging, the display will show the charging in progress icon and the screen will turn off after a few seconds.



Fig. 21 - Charging indicators

- 6- If the instrument is turned on (by pressing the 'POWER/CLEAR' button) at any time while connected to the power adapter, the instrument will display the charging status .
- 7- The USB Type-A or Type-C connector can be also plugged into a USB port of a personal computer, powered USB hub, or any other USB compliant power source.
- 5- The recharge time will depend on the battery's state of charge, and it may take up to 6 hours to fully recharge a depleted battery.

NOTES

- If the instrument has not been used for a long time, or the state of charge of the battery has fallen to a critically low level, a period of pre-conditioning of the battery is automatically added to the normal charging cycle, which increases the charging time in order to restore the battery capacity, No user intervention is needed, and this process is automatically carried out by the instrument.
- While the battery is completely depleted, pressing the power on button will not turn the instrument on, and it must be recharged before it can be used again.

11. MAINTENANCE

Keep the instrument in its carrying case when not in use and do not subject it to dampness, severe heat or cold. Do not use the instrument in the rain; if it should accidentally get wet, dry it off with a clean paper towel before storing it away.

Protect the unit from contact with any solvents. Never clean with a solvent or petroleum based medium such as gasoline, as these chemicals may attack the plastic parts and cause permanent damage. Never use an abrasive cleaner. Cleaning should be limited to wiping with a clean damp paper towel and a small amount of soap if required. Dry the unit thoroughly after any cleaning.

The unit is a sealed instrument, and contains no user serviceable parts. Opening this instrument will void the warranty.


12. WARRANTY

This instrument carries a one (1) year warranty (from the date of purchase by the original owner) against defects of material or workmanship. For details see the Standard Warranty Information on our web page at www.gtc.ca, or request a printed copy.

Type this URL in your browser to visit our website:

www.gtc.ca

Or scan the QR code below with your smart phone.

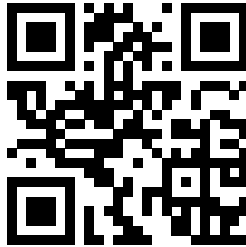

#121 - 7350 72nd Street
Delta, BC
Canada V4G 1H9

Tel: (604) 952-6699
Fax: (604) 952-6690
email: info@gtc.ca